

This is the basic threading guide from the Singer 750 manual, but applies to any 700 series Touch & Sew*. Hope you find it helpful, and watch my site for additions on other information. Some free and some for a fee.


Kind Regards,


threading the machine

Spools of various sizes are held firmly on the horizontal spool pin with the spool holder. Slip spool of thread onto spool pin and press holder firmly against spool so that thread unwinds from a stationary spool.


To hold small spools — press *small* end of holder against spool.

To hold large spools — press *wide* end of holder against spool.

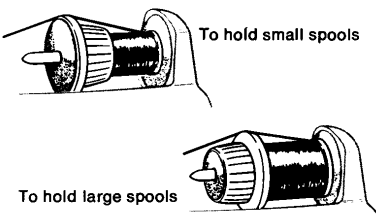


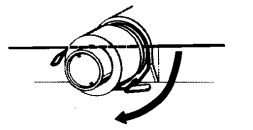


With two hands, slip thread horizontally *between* tension discs from the top.

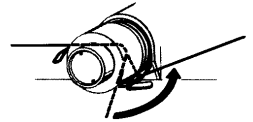

With right hand, lead thread *under* thread guide on right side . . .

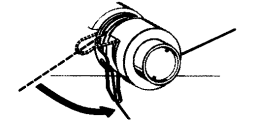


 . . . and, with left hand, lead thread *over* spring and *under* guide on left side.



Allow spring to return to its normal up position and continue threading the machine.

THREADING THE NEEDLE

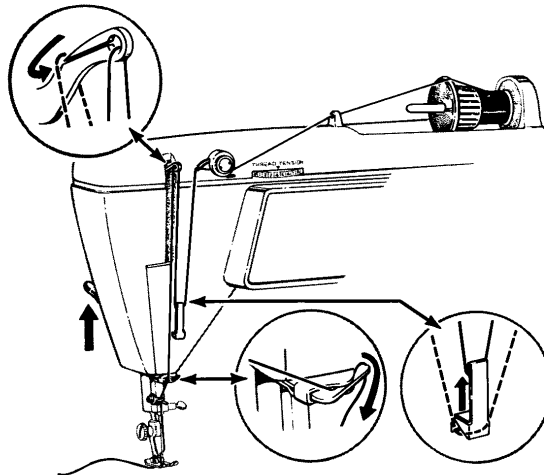

1. Turn hand wheel to raise take-up lever to its highest position, and *raise presser foot to release the tension discs*.
2. Lead thread through all points as shown, making sure to:
 - Thread tension discs as illustrated.
 - Thread take-up lever from *back to front*, guiding thread down over top of lever and then up into eyelet.
 - Thread needle from *front to back*, drawing about four inches of thread through eye of needle.

For greater convenience in threading the needle, use the built-in needle threader (see next page for instructions).

* A trade mark of The Singer Company