
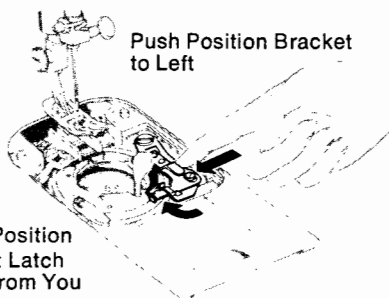


### Removing Bobbin Case

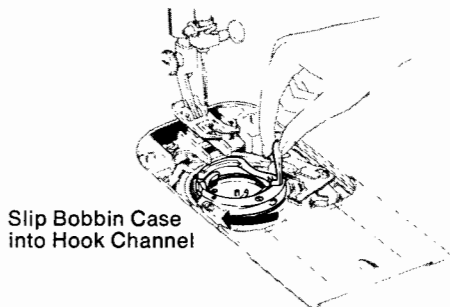

### Replacing Bobbin Case

## REMOVING THE BOBBIN CASE


*Make sure needle is at its highest position.*

1. Open slide plate and remove throat plate (see page 15 for instructions).
2. Remove bobbin. Keep bobbin push button in sewing position.
3. Swing position bracket latch *toward* you. Lift bracket and slide it to the right.
4. To remove bobbin case, twist case as shown, and lift out.

## REPLACING THE BOBBIN CASE

*Make sure needle is at its highest position.*

1. Keep bobbin push button in sewing position. Hold bobbin case by latch and, with latch to right of needle, slip case in position so that the groove engages hook channel.
2. Twist bobbin case as shown, until latch is in center.
3. Push position bracket to left until it snaps down, locking bobbin case in place.
4. Swing position bracket latch away from you to lock bracket in place.
5. Replace bobbin and snap latch down.
6. Replace throat plate and close slide plate.

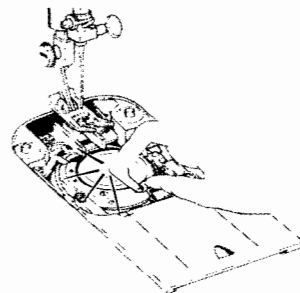

### Replace Bobbin and Snap Latch Down