

Singer

Athena 2000 / 1200

Touch Tronic 2005 / 2001 / 2010


(If equipped with – some models may not have a circuit breaker installed)

Athena 1200, 2000 Touch Tronic 2005 Series

CIRCUIT BREAKER

The electronic system of your machine is protected by a circuit breaker. If the sewing light goes on and the needle bar moves up and down, but you cannot select a pattern, you must push the red circuit breaker button, to reactivate the machine. If your machine is a portable model, carefully lift or tilt it to gain access to the button. Push button in. If your machine is secured to a cabinet, reach under front of cabinet and locate the special hole which gives you access to the button. Push button. Certain cabinet models may not have an access hole. In such instances, release the machine from the cabinet, tilt machine, and push button. Re-secure machine to cabinet. Re-select desired pattern.

Note: If button continues to disengage, contact your Singer representative or Approved Dealer.

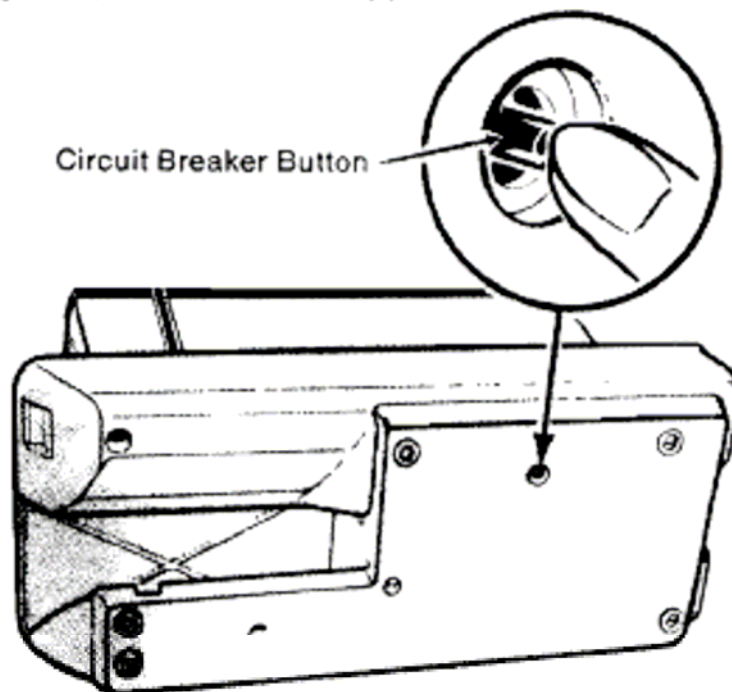

Circuit Breaker

Fuse Location

Touch Tronic 2010

Applies to all models fitted with a fuse, not all models may have been equipped

